


ZLINE ATTAINABLE LUXURY®

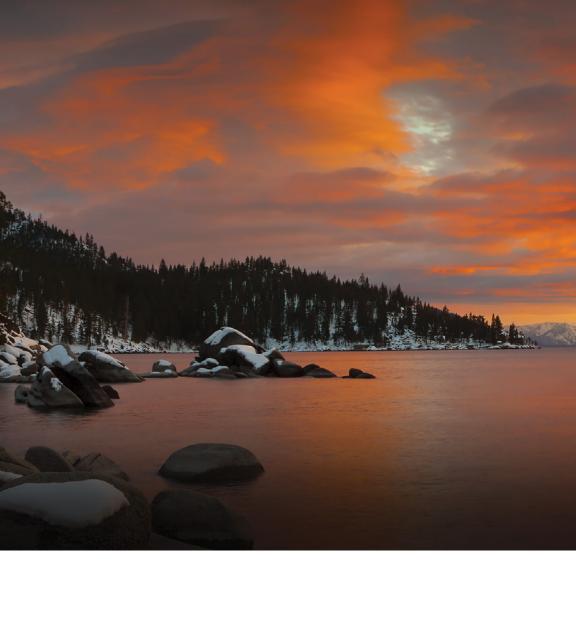



ZLINE Kitchen and Bath provides Attainable Luxury, where the kitchen and bath of your dreams is never out of reach. Through our unique designs and unparalleled quality, we're dedicated to providing you an elevated experience in the heart of your home. With an endless selection of features and finishes, our inspiration is your reality.

ZLINE is fueled by a passion for innovation; A relentless pursuit of bringing the highest end luxury designs and professional features into everyone's homes. Because we continually strive to improve our products, we may change specifications and designs without prior notice.

WARRANTY

COVERAGE

ZLINE Kitchen and Bath shower systems have a limited lifetime warranty from the original purchase date for the original purchaser of the product.

TERMS

This warranty applies only to the original purchaser of a shower system installed for normal residential use. This is defined as a single-family, residential dwelling in a non-commercial setting. Commercial settings include but are not limited to: schools, churches, hotels, restaurants, vacation rentals such as Airbnb, day care centers, private clubs, fire stations, common areas in multi-family dwellings, nursing homes, food service locations, and institutional food service locations such as hospitals or correction facilities. This warranty is non-transferable and will not be extended based on the date of installation. The warranty applies only to products installed in the continental United States and the District of Columbia.

Warranty shall not apply and ZLINE Kitchen and Bath is not responsible for damage resulting from negligence, improper maintenance, misuse, abuse, alteration of or tampering with the appliance, accident, natural disaster, improper installation, or installation not in accordance with the instructions contained in the manual, or the local codes.

WHAT IS NOT COVERED

- 1. Installation or start-up, damages, or problems caused by improper installation or use.
- 2. Installation in any commercial or non-residential application.
- 3. Removal or re-installation cost.
- 4. Aesthetic damage, scratches, or natural wear caused by normal use.
- Second-hand, open box products or products purchased from an unauthorized retailer.

TABLE OF CONTENTS

SAFETY INSTRUCTIONS	1
BLISS SHOWER SYSTEM (BLS-SHS)	2
ZLINE SHOWER FAUCET	22
BLISS SHOWER FAUCET (BLS-SHF)	27
EL DORADO SHOWER SYSTEM (ELD-SHS)	41
EL DORADO SHOWER FAUCET (ELD-SHF)	61
TROUBLESHOOTING	75

SAFETY INSTRUCTIONS

PRIOR TO INSTALLATION


- Make sure that the cold and hot water lines are turned off.
- Wrap all threaded connections with Teflon tape. Always wrap in a clockwise direction.
- Cover your drain to avoid losing parts.
- Do not disassemble the main system body, as it has been installed and commissioned correctly and precisely before delivery to the factory.
- To keep the system from jamming, flush the water pipe before installation.

Operating conditions: Working pressure at 0.05-1.0 MPa (including cold and hot water pressure) with applicable water temperature: 39.2°F - 194°F.

CARE AND MAINTENANCE

To keep the product clean and shining, follow the steps below:

- 1. Rinse clean with water and dry with a soft cloth.
- 2. Do not clean with soaps, acid, polish, abrasives, or harsh cleaners.
- 3. Do not use cloth with a coarse surface.
- 4. Unscrew the aerator and clean when necessary.
- If soldering the water connections when installing the system, remove the O-rings, cartridges, and washers before applying any heat.
- Protect your eyes when cutting or soldering.
- Do not over tighten screws/nuts. Finger tighten, then use a wrench/screwdriver to tighten the fixing screw/nut until snug.

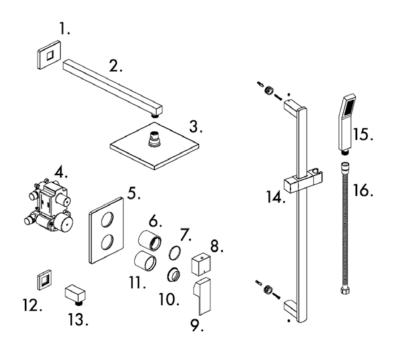


- 1. Flange cover
- 2. Shower arm
- 3. Top spray shower
- 4. Wall valve body
- 5. Faceplate
- 6. Sleeve
- 7. Washer
- 8. Water control handle

- 9. Switch handle
- 10. Cap
- 11. Sleeve
- 12. Flange cover
- 13. Angle valve
- 14. Shower rail
- 15. Shower handle
- 16. Hose

Bliss Shower System Product Specifications

BLISS SHOWER SYSTEM (BLS-SHS)

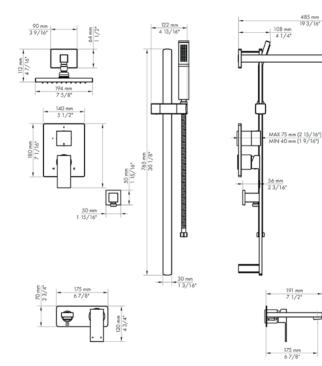


194 mm 7 5/8*

Bliss Shower System Tools

BLISS SHOWER SYSTEM (BLS-SHS)

Tools needed:

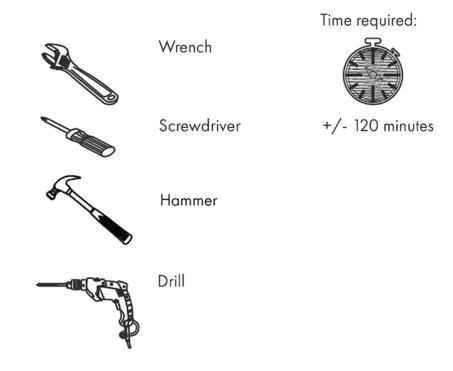





Hot Water



Cold Water




Torch



Warning





Plumber's Tape

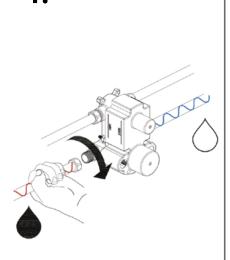






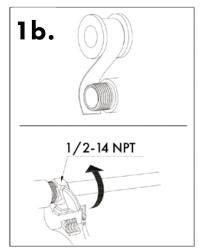

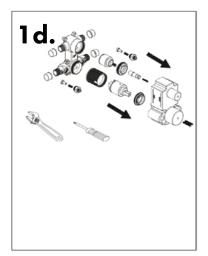


Slide the sleeves onto the pipes and then insert pipes into the wall valve. Tighten the ring around the pipes with the wrench. NOTE: If brazing is involved, you must remove the internal valve components prior to the brazing. Please note the original position of the cartridge.

2.

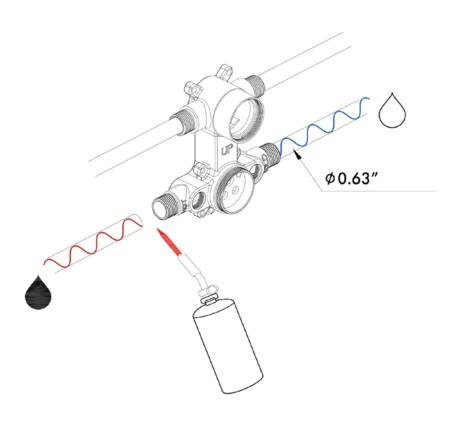


Braze the copper together.

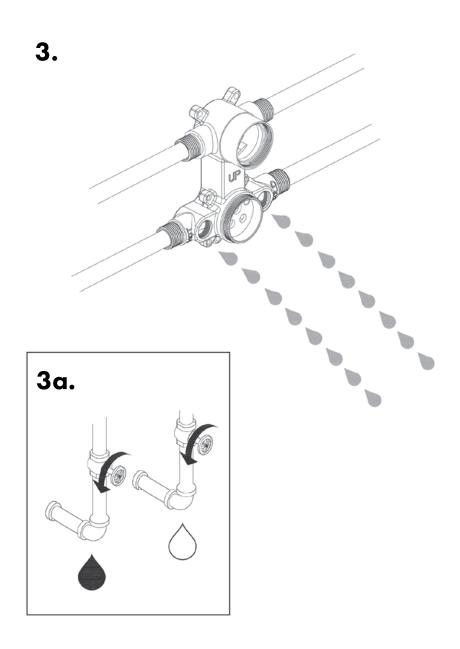


After brazing, purge the water supply system for 30 seconds.

4.

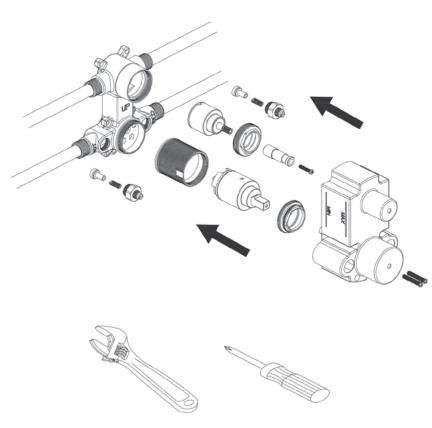


Reinstall the valve components into their original positions.

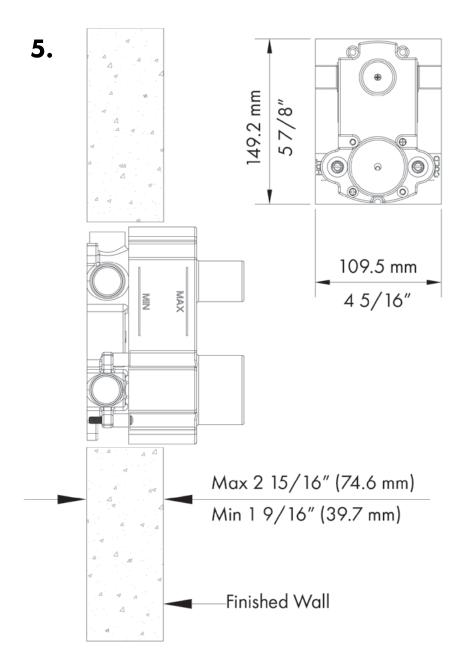


Use this diagram to understand the placement of the wall valve.

6.

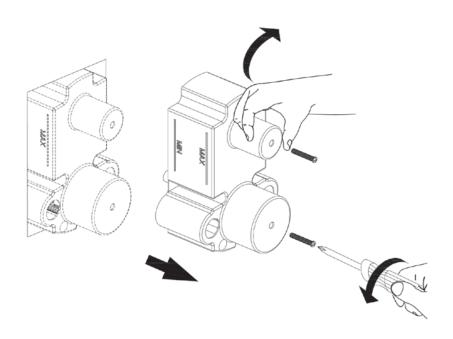



Screw the wall valve body into the system with a screwdriver. Do not overtighten.

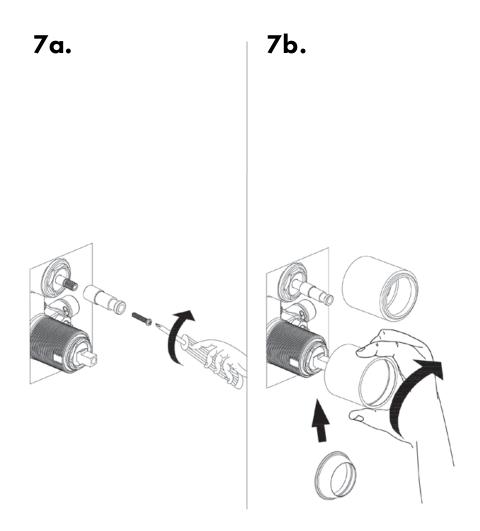


Screw the sleeve and washer into the wall valve body.


8.

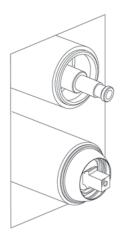

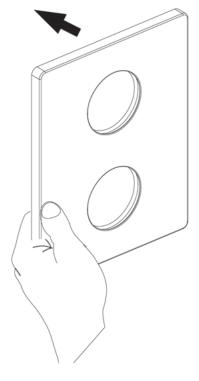

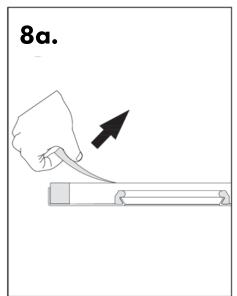



Attach the face plate and remove the plastic.

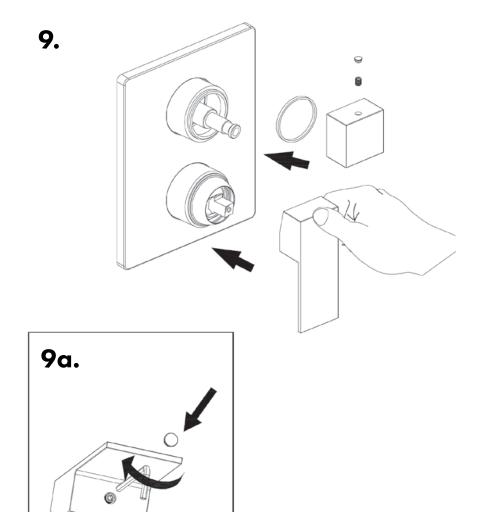


Attach the water control handle.



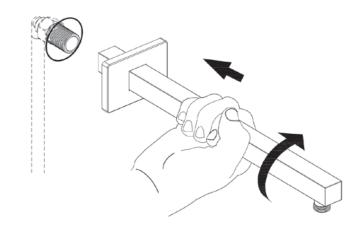


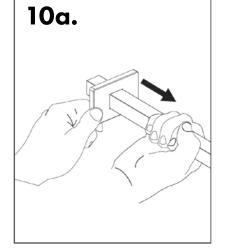

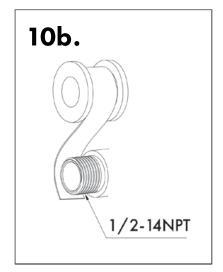


Connect the flange cover to the spout in the wall. Secure with plumber's tape to prevent leaks.


11.

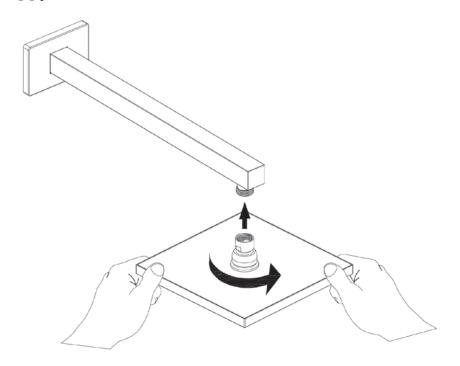


Twist the top spray shower into the shower arm.


12.

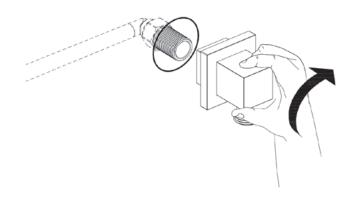

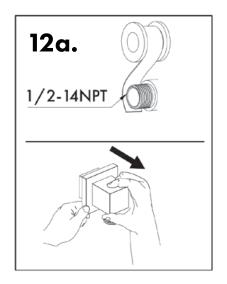


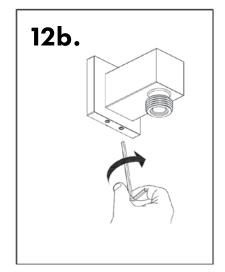

Connect the angle valve to the flange cover and screw together. Secure with plumber's tape to prevent leaks.

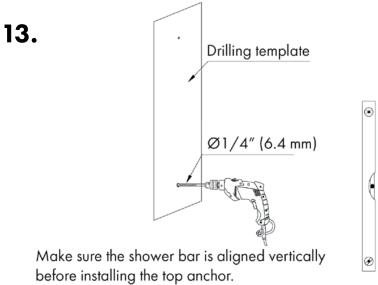




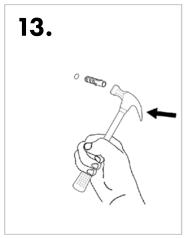


Use a pencil to mark the mounting holes on the wall. Use a hammer to put the screws in.


14.

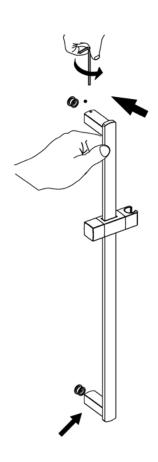


Screw the shower rail into the wall.

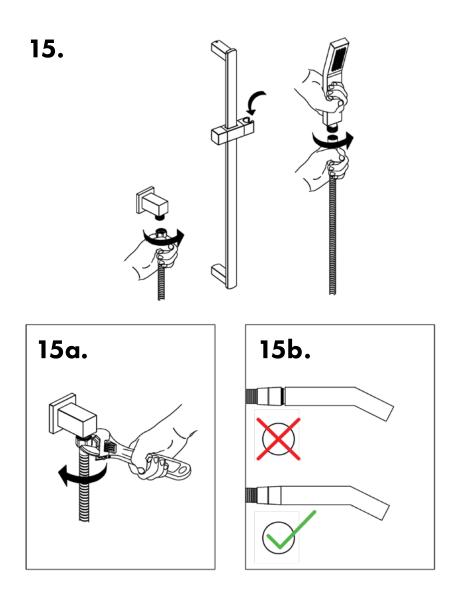

Connect the shower handle to the shower rail. Tighten with a wrench.

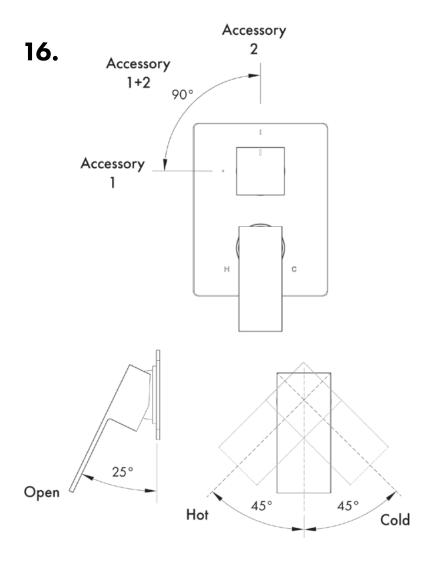

Review the diagram to understand the hot, cold, and open settings.

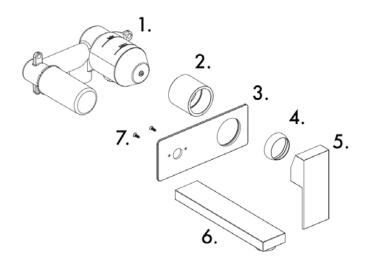


- 1. Rough-in
- 2. Sleeve
- 3. Faceplate
- 4. Cap
- 5. Handle
- 6. Spout
- 7. Screw

ZLINE Shower Faucet Tools


ZLINE SHOWER FAUCET


Tools needed:

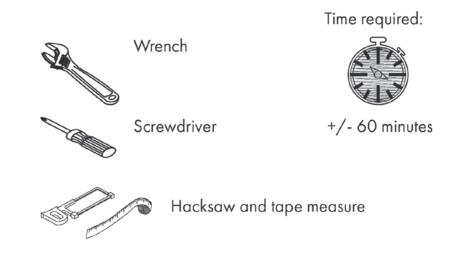






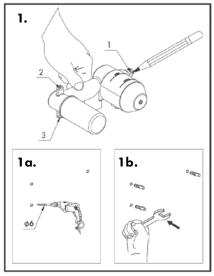

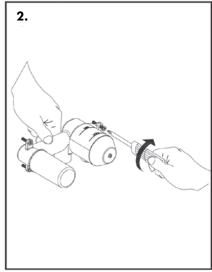


Mark on the wall where you want the faucet to be installed.


Use a screwdriver to screw the faucet onto the wall.

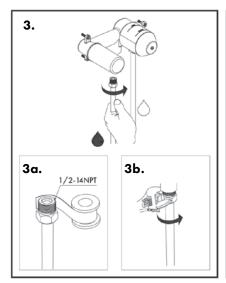

Attach the hose using plumbing tape and a wrench.

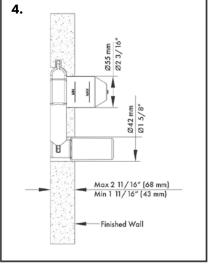

Place the components in the appropriate location.

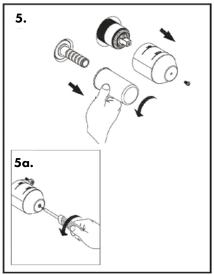


Make sure that the components are

6.

Screw the sleeve and washer into the wall valve body.


Make sure that the components are aligned properly.

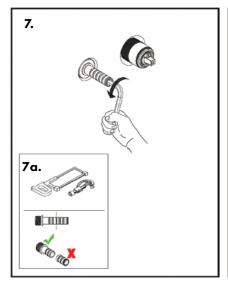


Tighten the components.




Take off the protective shield.

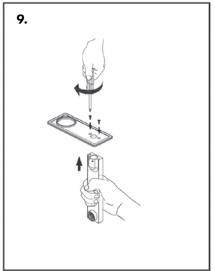

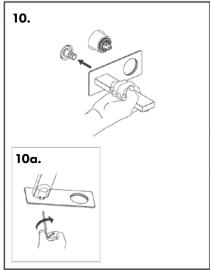


Attach faucet to base plate.

Attach base plate to wall.

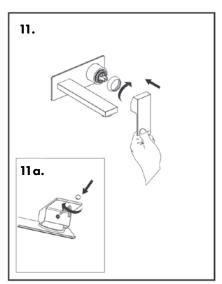


Attach handle to the fixture.

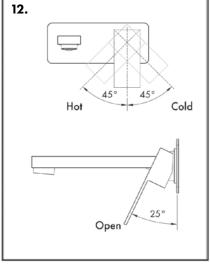

Review the diagram to understand the hot, cold, and open settings.

Bliss Shower Faucet Product Specifications 2


BLISS SHOWER FAUCET (BLS-SHF)

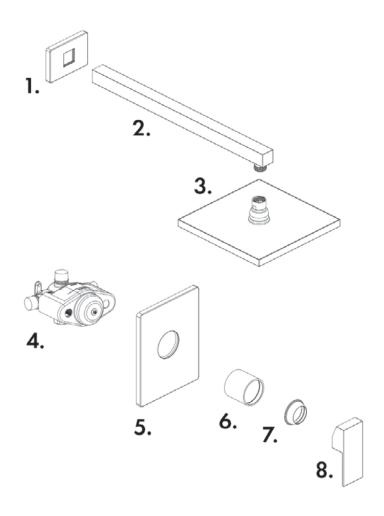

- 1. Flange Cover
- 2. Shower Arm
- 3. Top Spray Shower
- 4. Wall Valve Body
- 5. Faceplate
- 6. Sleeve
- 7. Cap
- 8. Switch Handle


Tools needed:




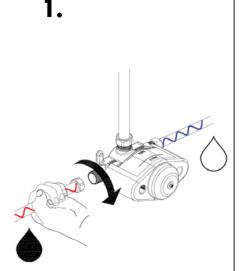






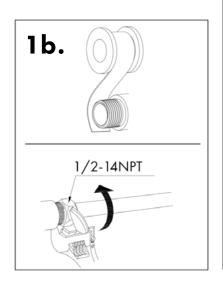

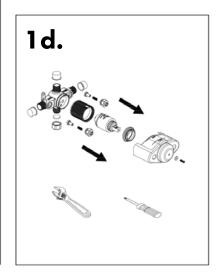


Slide the sleeves onto the pipes and then insert pipes into the wall valve. Tighten the ring around the pipes with the wrench.


2.

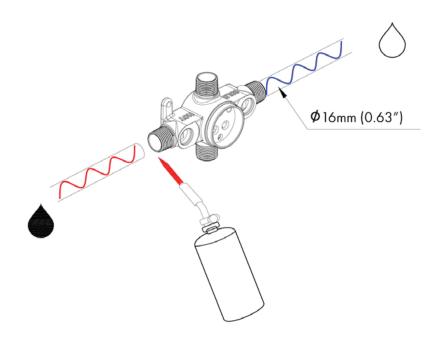


Braze the copper together.

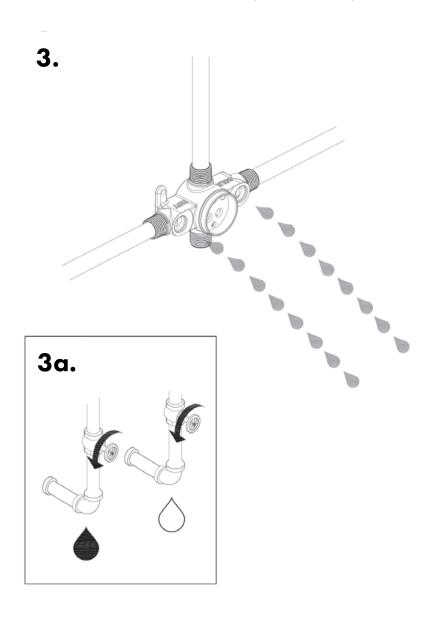

After brazing, purge the water supply system for 30 seconds.

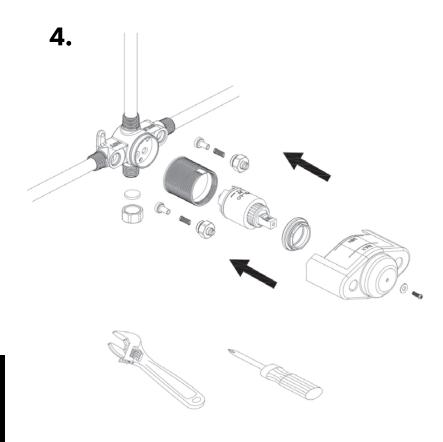


Reinstall the valve components into their original positions.

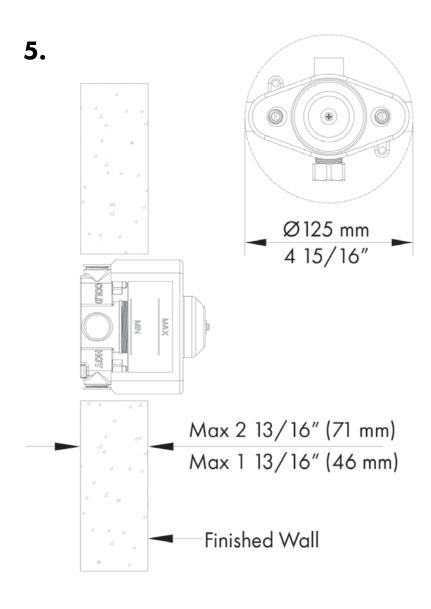


Screw the wall valve body into the system with a screwdriver. Do not overtighten.

6.

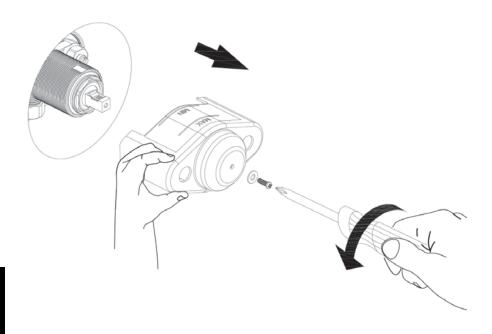


Place the components in the appropriate location.


7.

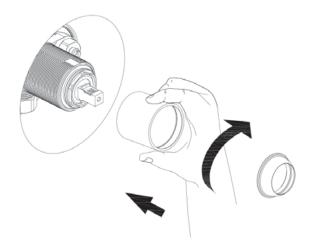

Screw the sleeve and washer into the wall valve body.

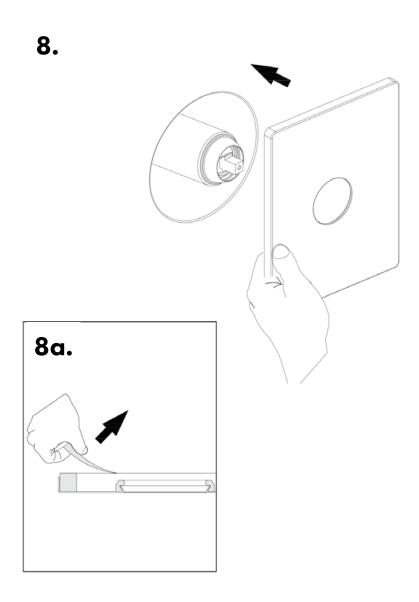


Attach the face plate and remove the plastic.

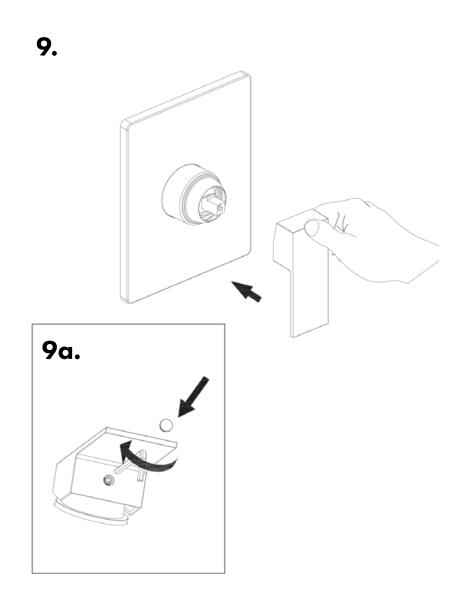


Attach the water control handle.



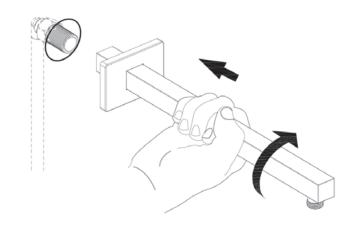




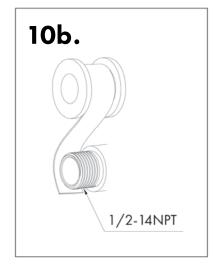


Connect the flange cover to the spout in the wall. Secure with plumber's tape to prevent leaks.

11.

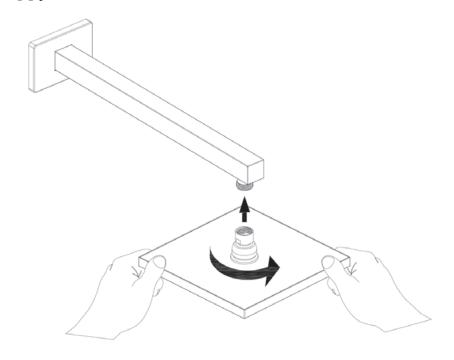

Twist the top spray shower into the shower arm.


12.

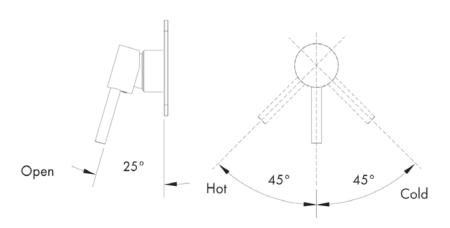

Review the diagram to understand the hot, cold, and open settings.


El Dorado Shower System Product Specifications

EL DORADO SHOWER SYSTEM (ELD-SHS)

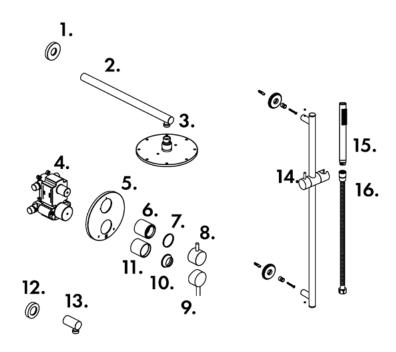

- 1. Flange cover
- 2. Shower arm
- 3. Top spray shower
- 4. Wall valve body
- 5. Faceplate
- 6. Sleeve
- 7. Washer
- 8. Water control handle


- 9. Switch handle
- 10. Cap
- 11. Sleeve
- 12. Flange cover
- 13. Angle valve
- 14. Shower rail
- 15. Shower handle
- 16. Hose

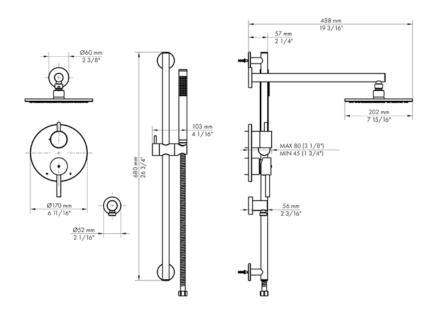

El Dorado Shower System Tools

EL DORADO SHOWER SYSTEM (ELD-SHS)


Tools needed:

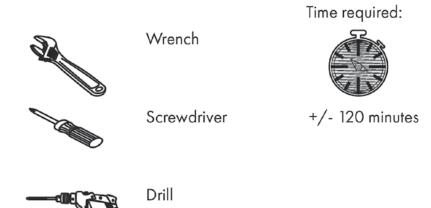










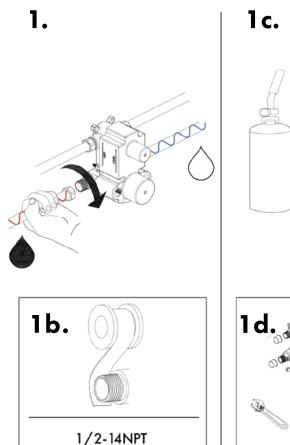

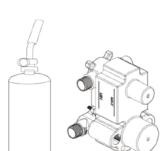


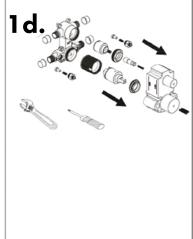

Slide the sleeves onto the pipes and then insert pipes into the wall valve. Tighten the ring around the pipes with the wrench.

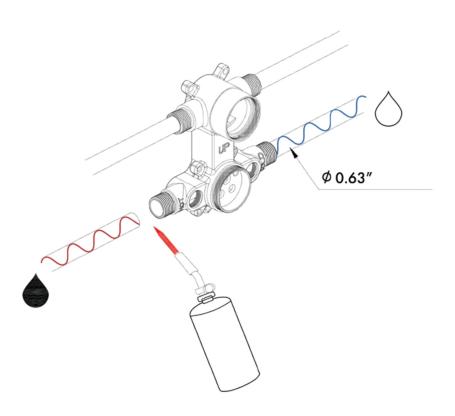


Braze the copper together.

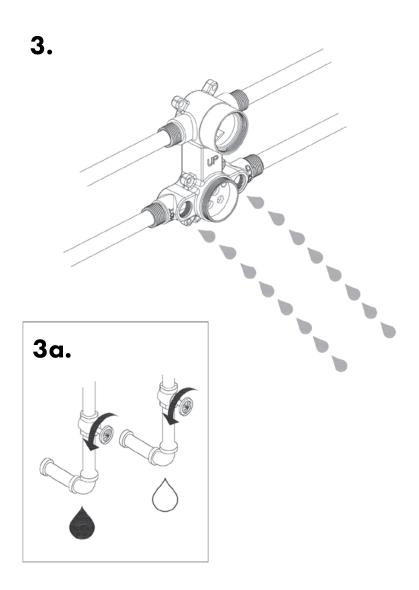


After brazing, purge the water supply system for 30 seconds.



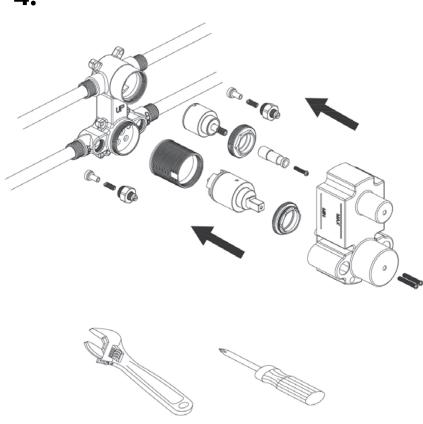


Reinstall the valve components into their original positions.

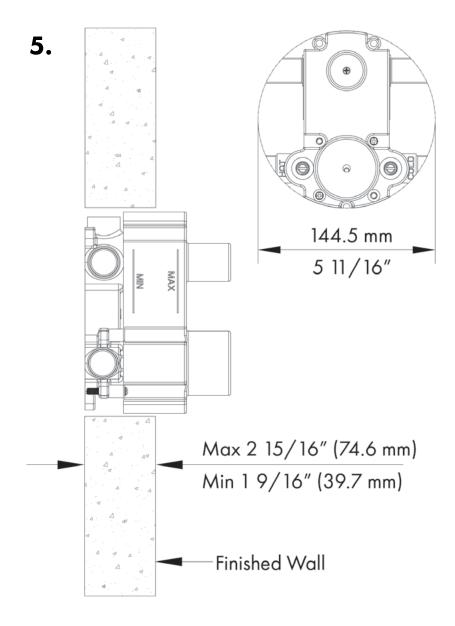

Screw the wall valve body into the system with a screwdriver. Do not overtighten.


6.

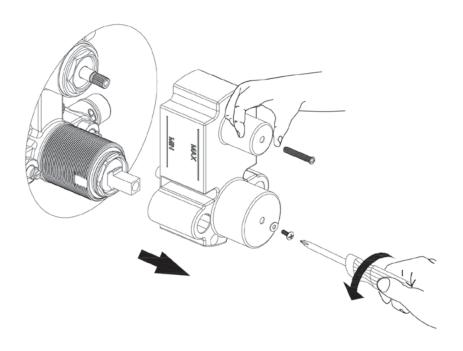


Place the components in the appropriate location.

7b. 7a.


Screw the sleeve and washer into the wall valve body.

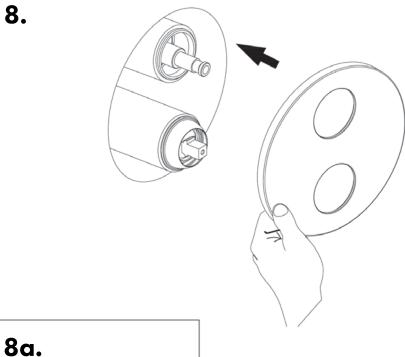


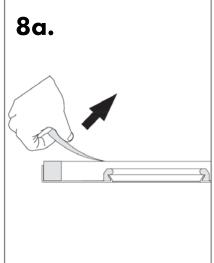

Attach the face plate and remove the plastic.




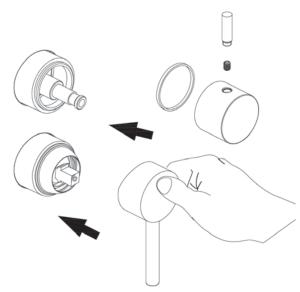


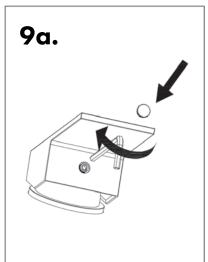


Attach the Water control handle.

10.

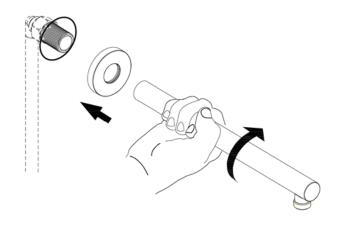


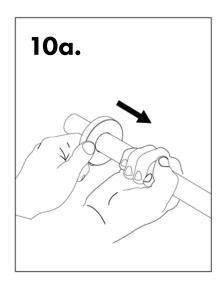

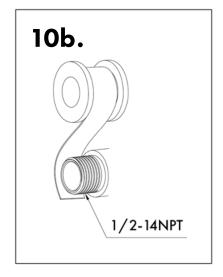

Connect the flange cover to the spout in the wall. Secure with plumber's tape to prevent leaks.

11.

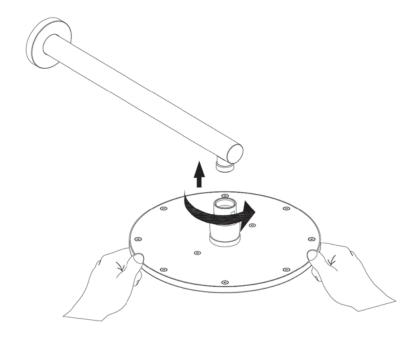



Twist the top spray shower into the shower arm.

El Dorado Shower System Installation


EL DORADO SHOWER SYSTEM (ELD-SHS)

12.

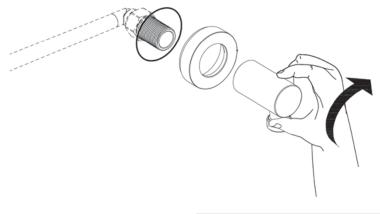

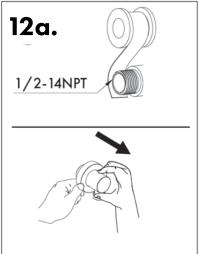

Connect the angle valve to the flange cover and screw together. Secure with plumber's tape to prevent leaks.

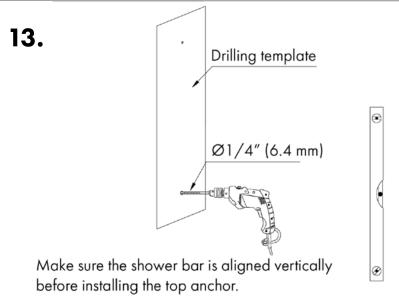





Use a pencil to mark the mounting holes on the wall. Use a hammer to put the screws in.

14.






Connect the components of the shower rail.


15.




Screw the shower rail into the wall.

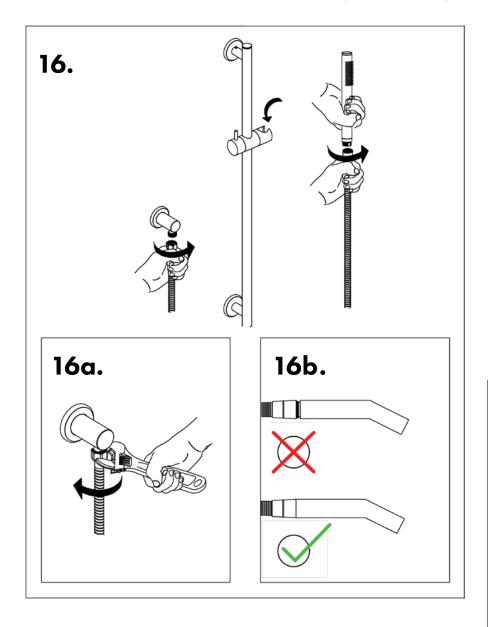


Connect the shower handle to the shower rail. Tighten with a wrench.

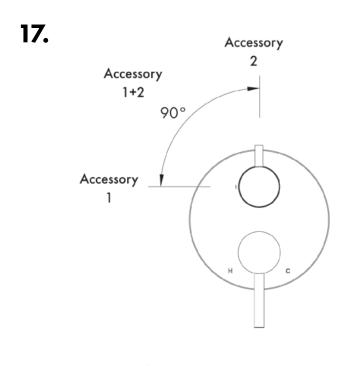

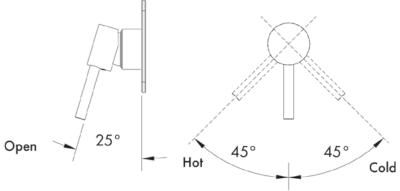


Review the diagram to understand the hot, cold, and open settings.

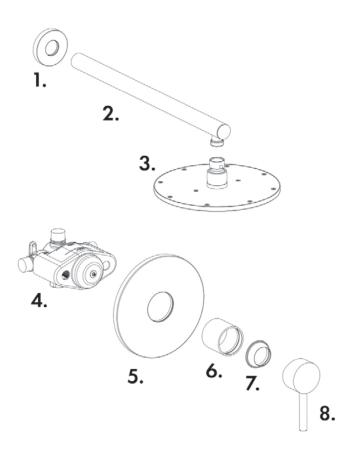

- 1. Flange Cover
- 2. Shover Arm
- 3. Top Spray Shower
- 4. Wall Valve Body
- 5. Faceplate
- 6. Sleeve
- 7. Cap
- 8. Switch Handle


Tools:




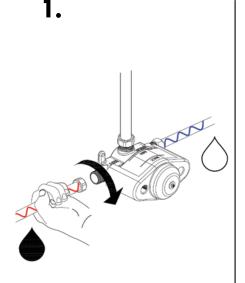






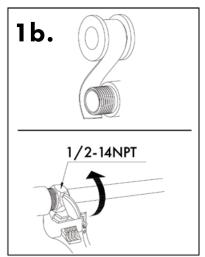

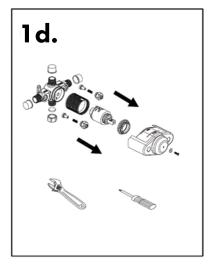


Slide the sleeves onto the pipes and then insert pipes into the wall valve. Tighten the ring around the pipes with the wrench. NOTE: If brazing is involved, you must remove the internal valve components prior to the brazing. Please note the original position of the cartridge.


2.

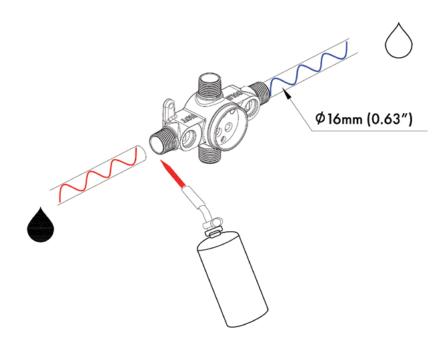


Braze the copper together.

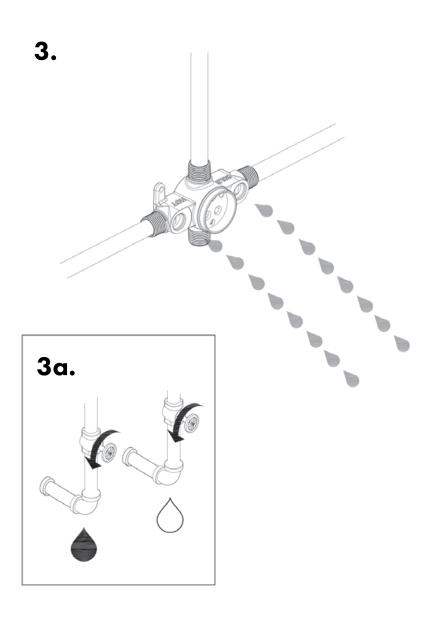

After brazing, purge the water supply system for 30 seconds.

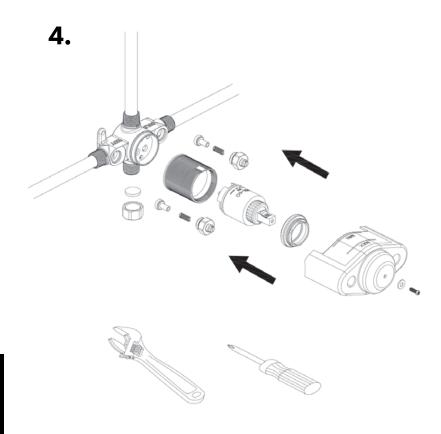


Reinstall the valve components into their original positions.

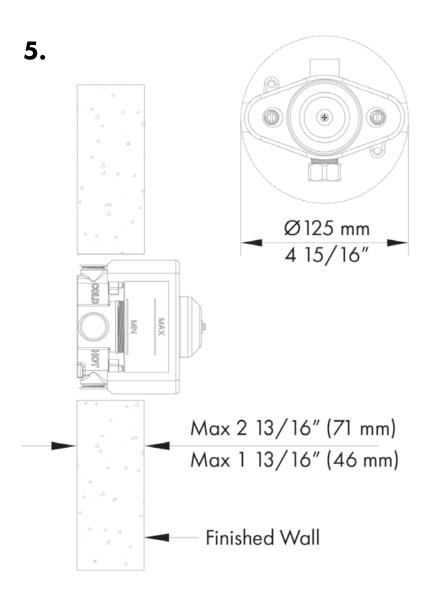


Use this diagram to understand the placement of the wall valve.

6.

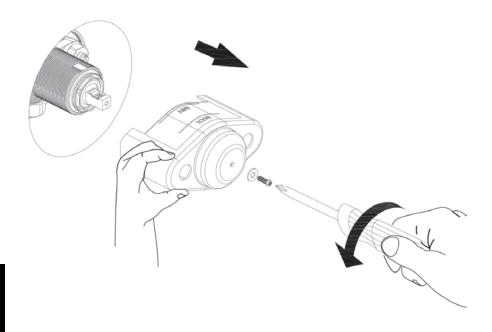


Place the components in the appropriate location.

7.

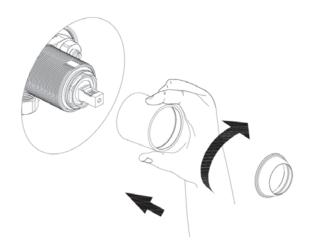


Screw the sleeve and washer into the wall valve body.

8.

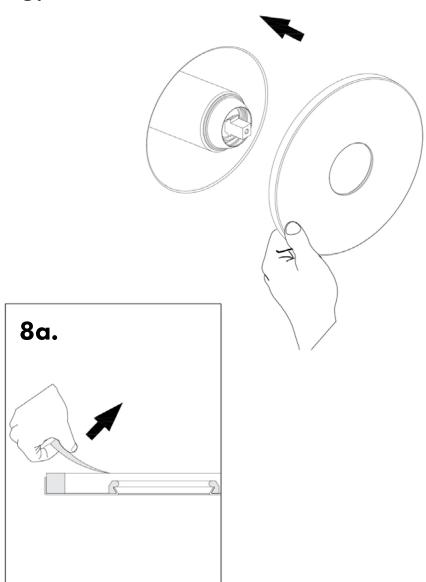



Attach the face plate and remove the plastic.

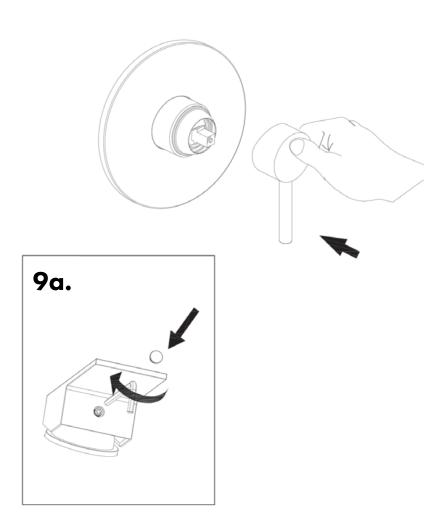


Attach the Water control handle.



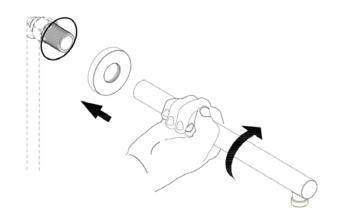


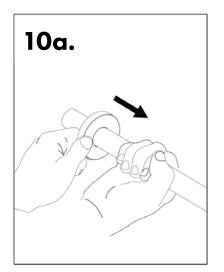

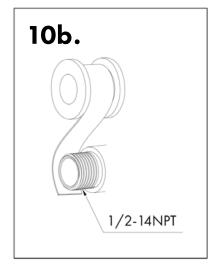


Connect the flange cover to the spout in the wall. Secure with plumber's tape to prevent leaks.

11.

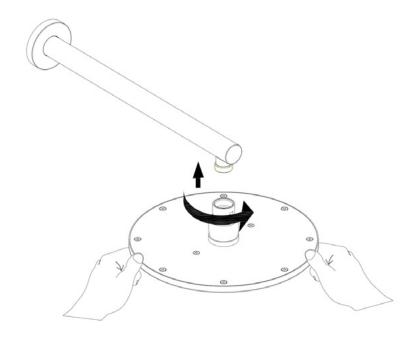

Twist the top spray shower into the shower arm.


12.

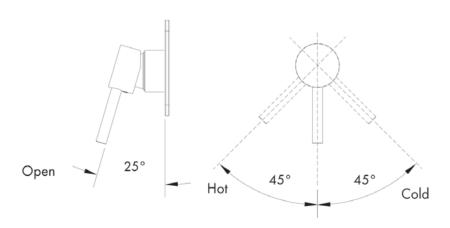

Review the diagram to understand the hot, cold, and open settings.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
There is leakage under the	The locking nut has come	Unscrew the lever on the
handle.	loose.	handle by hand. Loosen set
		screw with a hex wrench.
		Remove the handle and
		unscrew trim cap by hand.
		Tighten locking nut with an
		adjustable wrench.
Water will not shut off	Cartridge may be	Unscrew the level on the
completely.	defective.	handle by hand. Loosen set
		screw with a hex wrench.
		Remove the handle and
		unscrew trim cap by hand.
		Unscrew the locking nut
		with an adjustable wrench.
		Remove ceramic disc
		cartridge. Check for cracks.
There is a leak between	The spray head may be	Tighten the spray head
the spray head and the	loose or the washer is not	by hand until snug. Make
hose.	seated correctly in the	sure the washer is seated
	hose connection.	correctly.

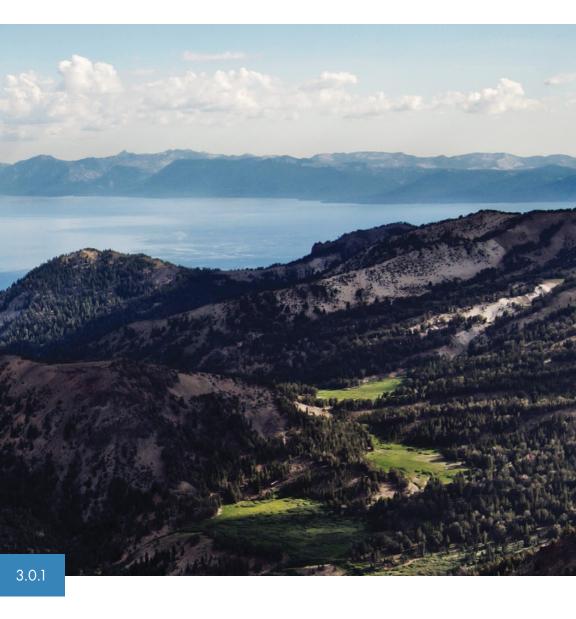

ZLINE ATTAINABLE **LUXURY**®

1-614-777-5004 contact@zlinekitchen.com